



E85509-00



FIBERPRO[®] CARPET SPOTTER

**3.5 Gallon
Carpet Spotter
Machine**



**Operator and Parts
Manual**

TABLE OF CONTENTS

SAFETY	3
MACHINE OPERATION	4 - 5
MACHINE DIAGRAM AND PARTS LISTING	6 - 7
WARRANTY	8

IMPORTANT SAFETY INSTRUCTIONS

- *When using a commercial spotter, basic precautions should be followed, including the following:
- *Read all instructions before using this commercial spotter.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE


WARNING

To reduce risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not leave commercial spotter unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If commercial spotter is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull a cord around sharp edges or corners. Do not run commercial spotter over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not handle plug or commercial spotter with wet hands.
- Do not put any objects into openings. Do not use with any opening blocked, keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes. Use extra care when cleaning on stairs. Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your commercial spotter indoors in a cool, dry area.
- Do not unplug by pulling on cord. To unplug, grasp the plug, NOT THE CORD.

THESE MODELS ARE GROUNDED, CONNECT TO A PROPERLY GROUNDED OUTLET ONLY - SEE GROUNDING INSTRUCTIONS.

GROUNDING INSTRUCTIONS

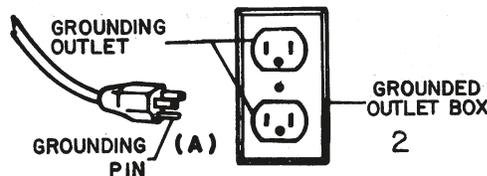

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a normal 120 volt circuit, and has a grounded plug that looks like the plug illustrated in sketch A.

Note: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

Operating Instructions for Commercial Spotter

WHEN THE MACHINE IS DELIVERED...

Check the carton carefully for signs of rough handling. Remove the machine from the carton. If the machine is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing lists and carrier receipt until the inspector has verified your claim. Liability ceases when the shipment is picked up by the carrier, but our customer service staff will be glad to furnish any information needed in connection with the claim and will expedite the repair of the machine.



BEFORE USING THE MACHINE

Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of this machine. Keep this manual handy at all times. The commercial spotter will provide years of satisfactory service if operated and maintained according to recommendations in the manual.



WARRANTY

To protect your investment, promptly fill in the required information on the warranty card included with the unit. Then mail the card back.



GENERAL PRECAUTIONS

Follow these guidelines to ensure operator safety and to maintain equipment in running order.

- Make sure the machine is plugged into an electrical outlet with the same voltage rating as

shown on the nameplate of the machine.

Do not attempt to plug a 115 volt machine into a 230 volt outlet or a 230 volt machine into a 115 volt outlet.

- Disconnect the power cord from the outlet before attempting maintenance or repair work.
- Do not leave machine connected to an electrical outlet when unattended.
- Never pull the machine by the cord or yank the cord from the receptacle. Replace a damaged cord immediately.
- If an extension cord is necessary, use a three conductor grounding cord – 12 gauge wire or heavier to prevent motor burnout and over-heating of wires.
- To avoid electric shock, do not expose to rain. Store indoors.
- To avoid fire, do not use machine in environments where combustible liquids, vapors or dust concentrations are present.



WARNING

- Do not expose the machine to freezing temperatures.
- Do not use the machine for totally dry vacuuming. This machine is not fitted with a fine dust filter.
- Do not use citrus-based cleaners in this machine.
- Do not use cleaning chemicals in this machine except those recommended for commercial extraction equipment. The use of any chemical with abrasive additives voids the warranty.
- Do not break off or pull out the ground prong on the plug.
- Do not attempt repair on a warranted machine unless instructions to perform it by an authorized shop are obtained from the factory.
- Do not use any replacement parts except those specified on the parts list. Proper performance of the machine could be affected if substitutions are made.
- Use defoamer at all times to prevent damaging the vacuum motor.
- Do not use water in excess of 140° F (62° C).

Failure to comply with the above warning instructions will void the warranty.



Operating Instructions for Commercial Spotter

Filling the Spotter

Disconnect the solution and recovery tanks. Add water and or chemicals to the lower solution tank. The tank will hold up to 3.5 gallons.

Operating the Spotter


- A. Attach the solution feed line to the quick disconnect at the bottom of the machine.
- B. Attach the vacuum hose to the vacuum inlet (handle) above the recovery tank lid.
- C. Turn the 3-way switch to use either the pump and vacuum or the vacuum alone.
(Allow approximately 30 seconds for the pump to prime.)
- D. Use the hand tool to spray and recover the solution.
- E. The float shut-off will disable the suction of the unit when the recovery tank is full. The operator will notice a distinctive change in the sound of the vacuum motor when the shut-off is activated. Empty the recovery tank to resume cleaning.

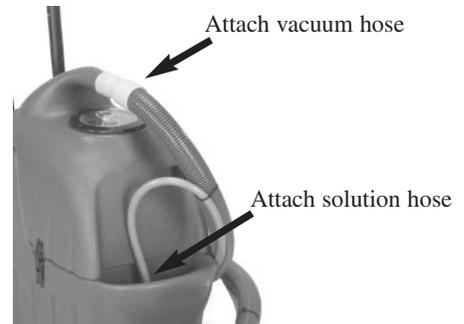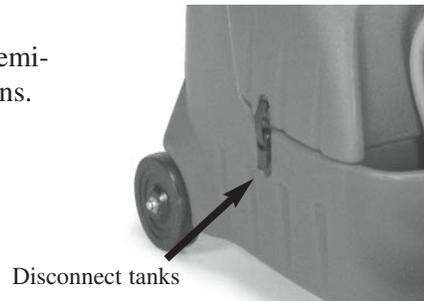

3-way switch

Emptying the Recovery Tank

- A. Disconnect the solution line and vacuum hose.
- B. Unlatch the recovery tank from the base of the unit and remove.
- C. Remove the drain plug.
- D. Drain tank over suitable outlet for wastewater.
- E. Rinse tank after each use.

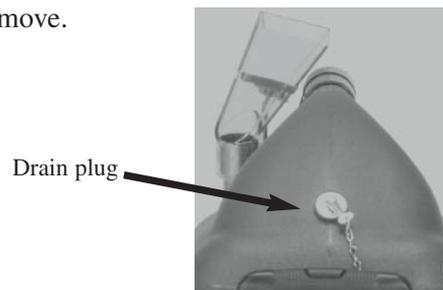


Basic Troubleshooting:

- A. If the pump does not prime, depress the lever on the hand tool to release the air lock.
- B. If solution flow is reduced or spray is weak:
 1. Check for low solution level in the solution tank.
 2. Check the screen on the hose in the solution tank for blockage.
 3. Check the spray jet in the hand tool for blockage.

If suction is low:

1. Check the recovery tank to see if it is full.
2. Check for blockage in the hand tool or the hose.
3. Add defoamer to recovery tank.


Parts Diagram

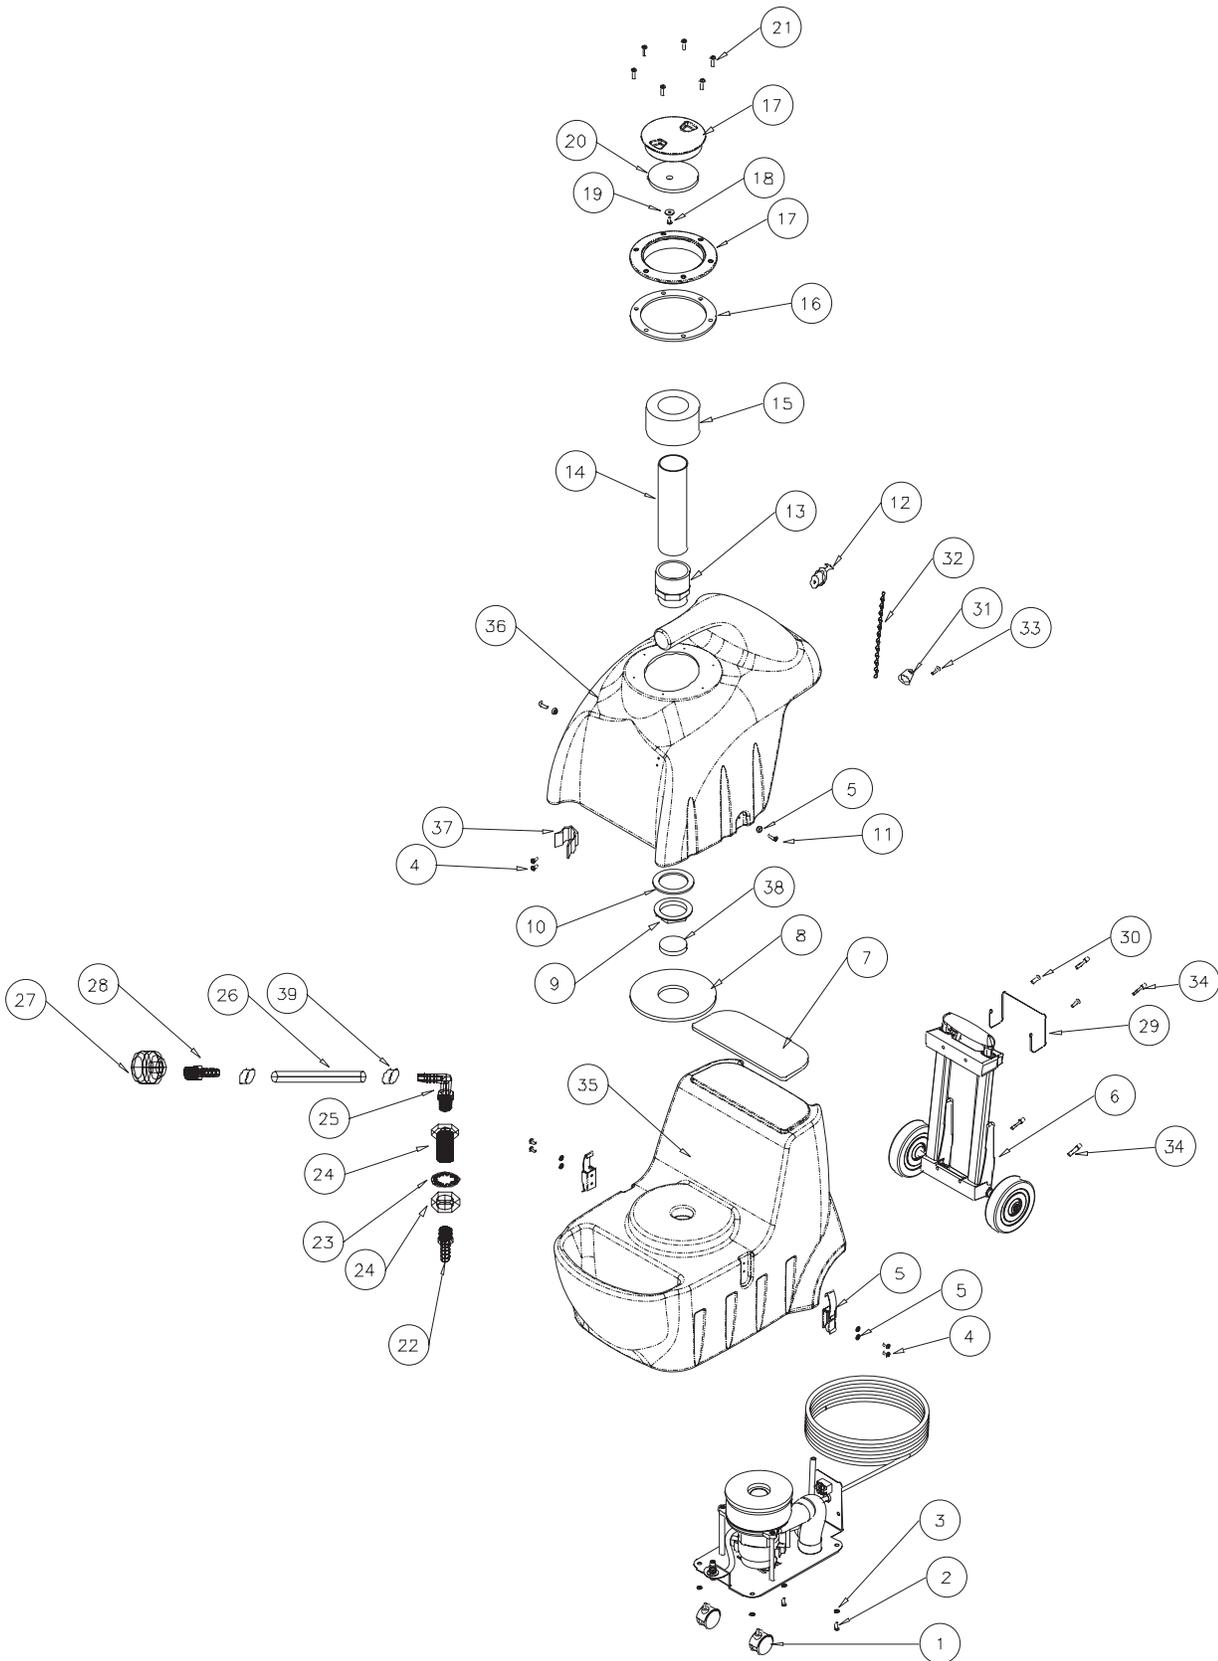

Parts List

ref. #	order #	description	ref. #	order #	description
1	85558	CASTER SWIVEL 45MM	23	85588	WASHER 5/8" X 1-3/16" NEOPRENE BOND
2	85559	SCREW 1/4-20 X 1/2" PHIL. STAINLESS STEEL	24	85589	ANCHOR CONECTOR 1/8"
3	85169	WASHER 1/4 MED SPLIT LOCK ZINC	25	85618	FITTING ELBOW 90 DEGREE 1/4-1/8
4	85082	SCREW, 8-32 X 1/4", THPH, BLACK	26	85753	HOSE 1/4" BRAIDED
5	85565	LATCH OVER CENTER W/ KEEPER	27	85636	FILTER, MESH SCREEN
6	85566	HANDLE / WHEEL ASSEMBLY	28	85619	FITTING 1/4 NPTM X 1/4 HOSE BARB
7	85567	GASKET SOLUTION TANK	29	85620	CORD HOOK
8	85568	GASKET DONUT 3/8" THICK	30	85046	SCREW 10-24 X 1/2"
9	85569	NUT, LOCK, DIE CAST, 1-1/2"	31	85621	END LOOP STAINLESS STEEL W/ TWO HOLES
10	85635	DAMP VALVE GASKET 1-1/2" THIN	32	85622	12" STAINLESS STEEL JACK CHAIN
11	85150	SCREW 8-32 X 1/2" PAN HEAD PHILLIPS	33	85585	SCREW, 8-18 X 1/2" PHILLIPS PAN
12	85577	PLUG 7/8" X 1-1/16" SNAP-TITE	34	85624	SCREW 1/4-20 X 1" SHCS
13	85578	BULKHEAD 1-1/2" MPT X 1-1/2"	35	85625	SOLUTION TANK
14	85579	1-1/2" PVC SCHEDULE 40 PIPE	36	85626	RECOVERY TANK
15	85580	FLOAT RING VACUUM SHUT-OFF	37	85627	CLIP, SPRING, BLACK VINYL COATED
16	82010	GASKET, LID, 6" O.D. X 4.6" I.D.	38	85633	FILTER, FOAM, 1-1/2" O.D. X 1/2" THICK
17	82009	LID 4" CLEAR W/ BLACK RING	39	85628	CLAMP 1/4" WORM GEAR STAINLESS STEEL
18	85584	WASHER #6 X 5/8 SAE FLAT 55	Not Illustrated		SOLUTION HOSE ONLY
19	85585	SCREW 8-18 X 1/2 PAN HD PHIL SS			85522
20	85586	SHUT-OFF DISK			83092
21	85148	SCREW #8 X 3/4" PHILLIPS FLAT TS			85520
22	85587	FITTING 1/8" NPTM X 1/4 HOSE BARB			85521
					Vac/Sol.Hose Assembly
					VACUUM HOSE ONLY

Motor Assembly

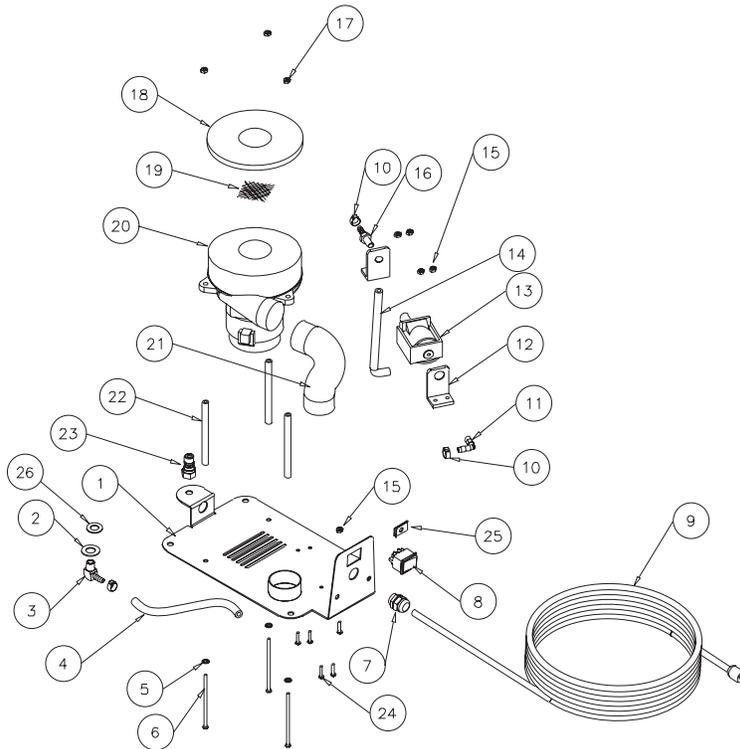

ref. #	order #	description	ref. #	order #	description
1	83219	BASE PLATE WELDMENT SPOTTER	16	85587	FITTING, 1/8 NPTM X 1/4 HOSE BARB
2	85399	WASHER 3/8" FLAT STAINLESS STEEL	17	85358	NUT, 1/4-20, LOCK NYLON INSERT
3	85618	BARB ELBOW (90) 1/4-1/8 BRASS	18	85652	VACUUM MOTOR GASKET
4	85753	HOSE 1/4" BRAIDED	19	85653	SCREEN VACUUM MOTOR
5	85169	WASHER 1/4 MED SPLIT LOCK ZINC	20	85684	MOTOR, VACUUM, IMPERIAL ELECTRIC
6	85623	CAP SVREW 1/4-20 X 5-1/2" ZINC	21	85654	1-1/2" WIRE REINFORCED HOSE
7	83203	STRAIN RELIEF 1/2" NPT	22	85655	MOUNTING POST VACUUM MOTOR
8	85629	SWITCH ROCKER SPOTTER	23	82005	MALE QUICK DISCONNECT
9	85564	POWER CORD, 18/3 X 15'	24	85046	SCREW 10-24 X 1/2" PHILLIPS TRUSS HEAD
10	85631	CLAMP 1/4" WORM GEAR STAINLESS STEEL	25	85656	NUT SPEED 1/4-20 U TYPE CLIP
11	85637	FITTING NYLON, 90 DEG. ELBOW	26	85657	WASHER NYLON .50 ID X .75 OD X .13 THK.
12	85649	MOUNT, FLOJET PUMP, SPOTTER	Not Illustrated		
13	85553	PUMP, OSCILLATING, FLOJET			X8284
14	85763	HOSE 1/4" BRAIDED			83215
15	85651	NUT 10-24 W/ NYLON INSERT			PX215
					X8497B
					SCREW 8-32 X 3/8 PHIL PANTCS
					NUT 1/2" CONDUIT
					CLAMP 2-1/2" WORM GEAR S.S.
					SWITCH LABEL 2.5" X 1.5"

BETCO US WARRANTY POLICY

10 year coverage

Subject to the conditions stated below, Betco warrants parts and labor on rotationally molded polyethylene tanks/housings and injection molded vacuum head assemblies to be free from defects in materials and workmanship for a period of ten years to the original purchaser.

3 Year Coverage

Subject to the conditions stated below, Betco warrants parts and labor on all other Betco components to be free from defects in materials and workmanship for a period of three years to the original purchaser.

1 Year Coverage

Subject to the conditions stated below, Betco offers a limited warranty on parts and labor on the following equipment: parts and accessories to be free from defects in materials and workmanship for a period of one year to the original purchaser.

- PowerUp™ 14 Upright Vacuum: #E29990-00
- Bac Pac Lite Vacuum: #85903-00
- FiberPRO® Floor Dryer: #85507-00
- WORKMAN™ Series Vacuums: #85024-00, #85025-00, #83012-00, #85027-00
- All Tools and Accessories
- All Battery Chargers
- All Batteries are pro-rated for 1 year

Allowable Travel Time Warranty Reimbursement:

Eligible equipment: All battery and propane powered equipment products. Warranty period: 90 days from date of sale to the original purchaser. A maximum 180 mile round trip at 50 cents per mile will be allowed for warranty consideration.

Propane Machine Warranty:

Kawasaki engines are warranted by Kawasaki for a period of 2 years against manufacturer defects. All other components (except wear items)* are warranted by Betco for a period of 3 years.

***Wear Items exempt from Warranty consideration include but may not be limited to: power cords, transport wheels, vacuum bags, belts, squeegee blades, pad drivers, clutch plates, handle grips, filters, screens, throttle cables, brushes and carbon brushes.**

Subject to the conditions and exceptions stated in this warranty, Betco warrants the Betco products to be free from defects in material and workmanship, under normal use and service, for the periods listed under the warranty policy to the original purchaser. At any time during the warranty period, Betco will furnish replacement parts for the Betco parts to the original purchaser. Such parts will be furnished and charged including transportation costs, to the original owner through any Betco authorized Service Distributor. If the original part is returned within the warranty policy period from date of delivery for inspection by Betco and is found to be defective the owner will be credited for the cost of replacement parts plus shipping and handling. Replacement parts that have become defective through wear or abuse are not included in this warranty.

This warranty does not apply to damage or defect caused by accident, misuse, negligence, fire, or to any Betco product which has been serviced or repaired by other than an authorized Betco Service Distributor or Betco factory personnel. This warranty is void if products are used for any purpose other than that which was intended. There are no other warranties expressed or implied. In no event shall Betco be liable for incidental or consequential damages or any damage to person or property. (Please note some states do not allow the exclusion or limitations for incidental and consequential damages).

