





1 Prepare the area using the standard cleaning protocol. Make sure you preclean any heavily soiled areas.




2 Review the product **SDS** and label to understand proper safety precautions and **PPE** recommendations. Spray the product according to label directions with the micron size listed. The operator should wear a N95 filtering facepiece respirator or half face respirator with a N95 filter.

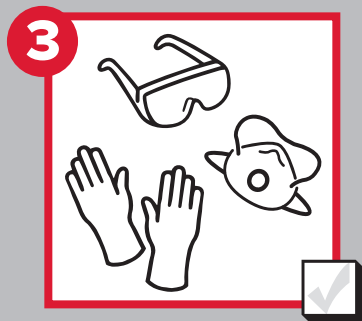

3 Wear the proper **PPE**, as listed on the product label, **SDS** or in accordance with the employer's worker safety program. Review the manufacturer instructions in the sprayer device manual and follow accordingly.

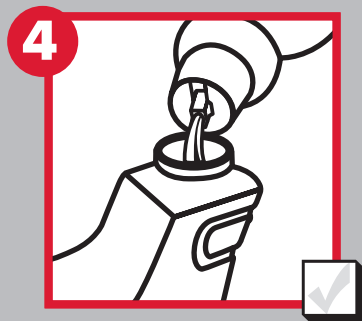


4 Pour the ready-to-use or diluted concentrate disinfectant into the electrostatic sprayer reservoir.

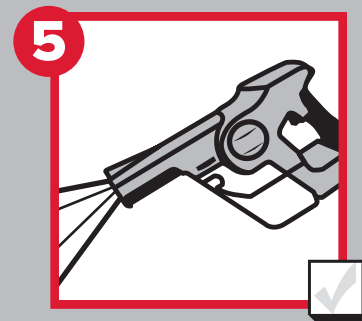


5 Follow the directions on the sprayer to prime the unit and have it ready for the spray application.




6 Close the door to the room. Post a **Do Not Enter** sign by the door. Make sure bystanders or pets are **NOT** in the room that is to be treated.

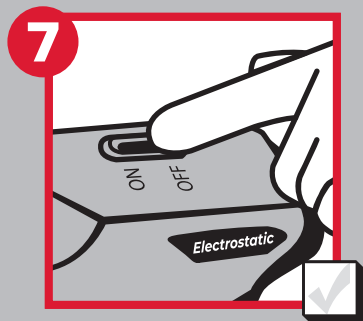

7 Place the electrostatic spray function in the **ON** position. If the sprayer has the ability to change nozzles that impact particle size, set the size according to the spraying directions on the label. Position in a rear corner of the area to be sprayed. Using the sprayer, apply disinfectant evenly over the hard, non-porous inanimate surface to be cleaned, at the distance specified on the label. Make sure to cover surfaces evenly.

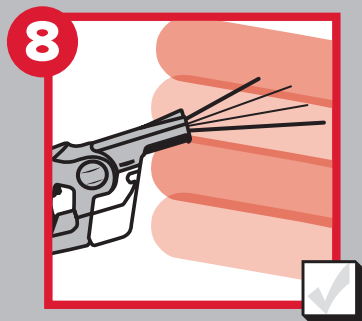

8 When applying the solution, make sure you move at an even pace to ensure the surfaces are thoroughly covered. Apply solution using a **slow sweeping motion** across the surfaces and allow the spray to overlap when moving to the next section. Follow a continuous path through the room moving backward toward the door, spraying away from your body and not walking into the spray.

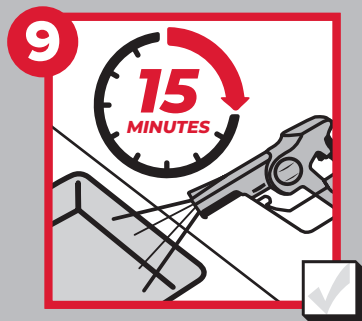

9 All surfaces must remain wet for the required time listed on the label. Wipe surfaces dry (or rinse) (or allow to air dry). Allow the treated room to remain unoccupied for **15 minutes** before reentering.

After use, follow directions on the sprayer to purge the system and perform any maintenance prior to storage.



10 Remove the **Do Not Enter** sign and stow the unit or prepare it for the next application.