





Improper installation may cause the product to fall, leading to damage or injury. Follow these steps carefully. To open the Clario® C3 dispenser cover, press the button at top to release the cover. Use the key if the dispenser is locked. Turn the key CCW to unlock.

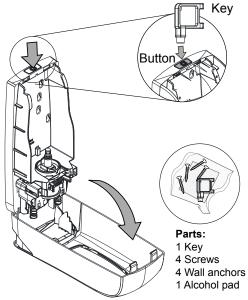

Hang the dispenser a minimum of 8 inches above all
 surfaces. ADA requires dispenser be mounted no more than 48" from ground.

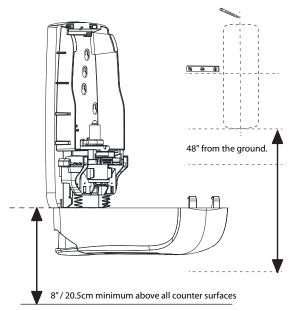

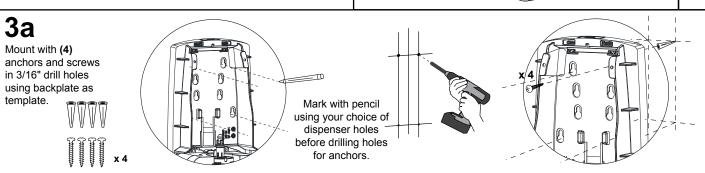


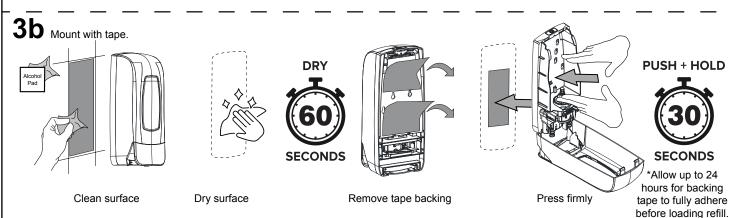


- Pump should stay in dispenser between refills.

 To adjust dosage size, remove retainer clip (A) and pump (B) then slide the dose adjuster (C) with a pen or small flat head screwdriver to the desired setting:
 - Low/Left = 0.5ml
 - Medium/Middle = 1.0ml
 - High/Right =1.5ml


Then replace pump **(B)** and retainer clip **(A)**. Do not discard retainer clip.

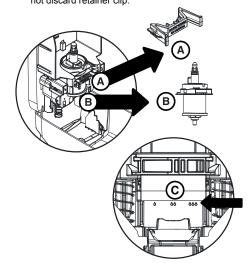


Push refill bag opening onto top of pump adapter post and push all the way down until fully seated and valve in refill bag opens.

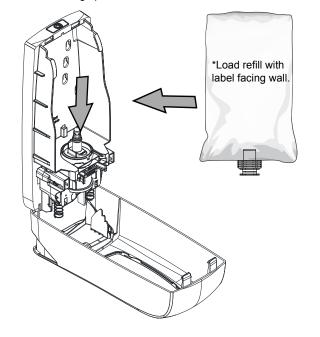

Ensure edges of refill bag are fully inserted into dispenser body and does not pinch bag when closing.

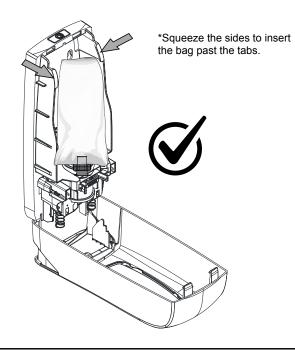

Close dispenser cover and activate until product dispenses to ensure pump is primed.

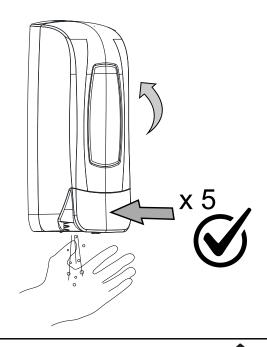

Cleaning and Maintenance

Clean exterior surfaces of the dispenser using warm water and mild soap. DO NOT USE ABRASIVE CLEANSERS. Dry with a soft cloth.

Cautions

- It is the installer's responsibility to ensure installation of unit complies with all applicable codes, standards and regulatory requirements.
- 2. Do not install this dispenser above heat sources or near sources of ignition/flame.
- Do not install where a failure of the mounting system or dripping of product from hands may cause damage to equipment or create a potential safety hazard.



Premium Design, Practical Savings.

2025 Betco® Corporation
All Rights Reserved
Betco Corporation
400 Van Camp
Bowling Green, OH 43402
1-888-GO-BETCO (888-462-3826) · Betco.com